

M-POWER-1T-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE
FOR VERSIONS WITH SWITCHES / AC PIGTAILS

Distributed by



Mormax Company, Inc.

8 Westchester Plaza

Elmsford, NY 10523



914-699-0101



sales@mormax.com



mormax.com



CUT HOLE IN WOOD

1

Rout/cut mounting hole in wood/stone/etc. for outlet as indicated on template labeled "ROUTING TEMPLATE".



INSTALL OUTLET

2

Insert outlet from top, and slip mounting brackets as shown over threaded studs. Screw the four nuts (8-32) onto each of the four studs below the mounting brackets and tighten, locking the outlet in place.

**NOTE: Max Torque Force when tightening nuts is:
0.4 N-cm ~ 0.6 N-cm**



M-POWER-1T-TRIM PLATE


ABOVE SURFACE TRIM PLATE INSTALL GUIDE
FOR VERSIONS WITH SWITCHES / AC PIGTAILS

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

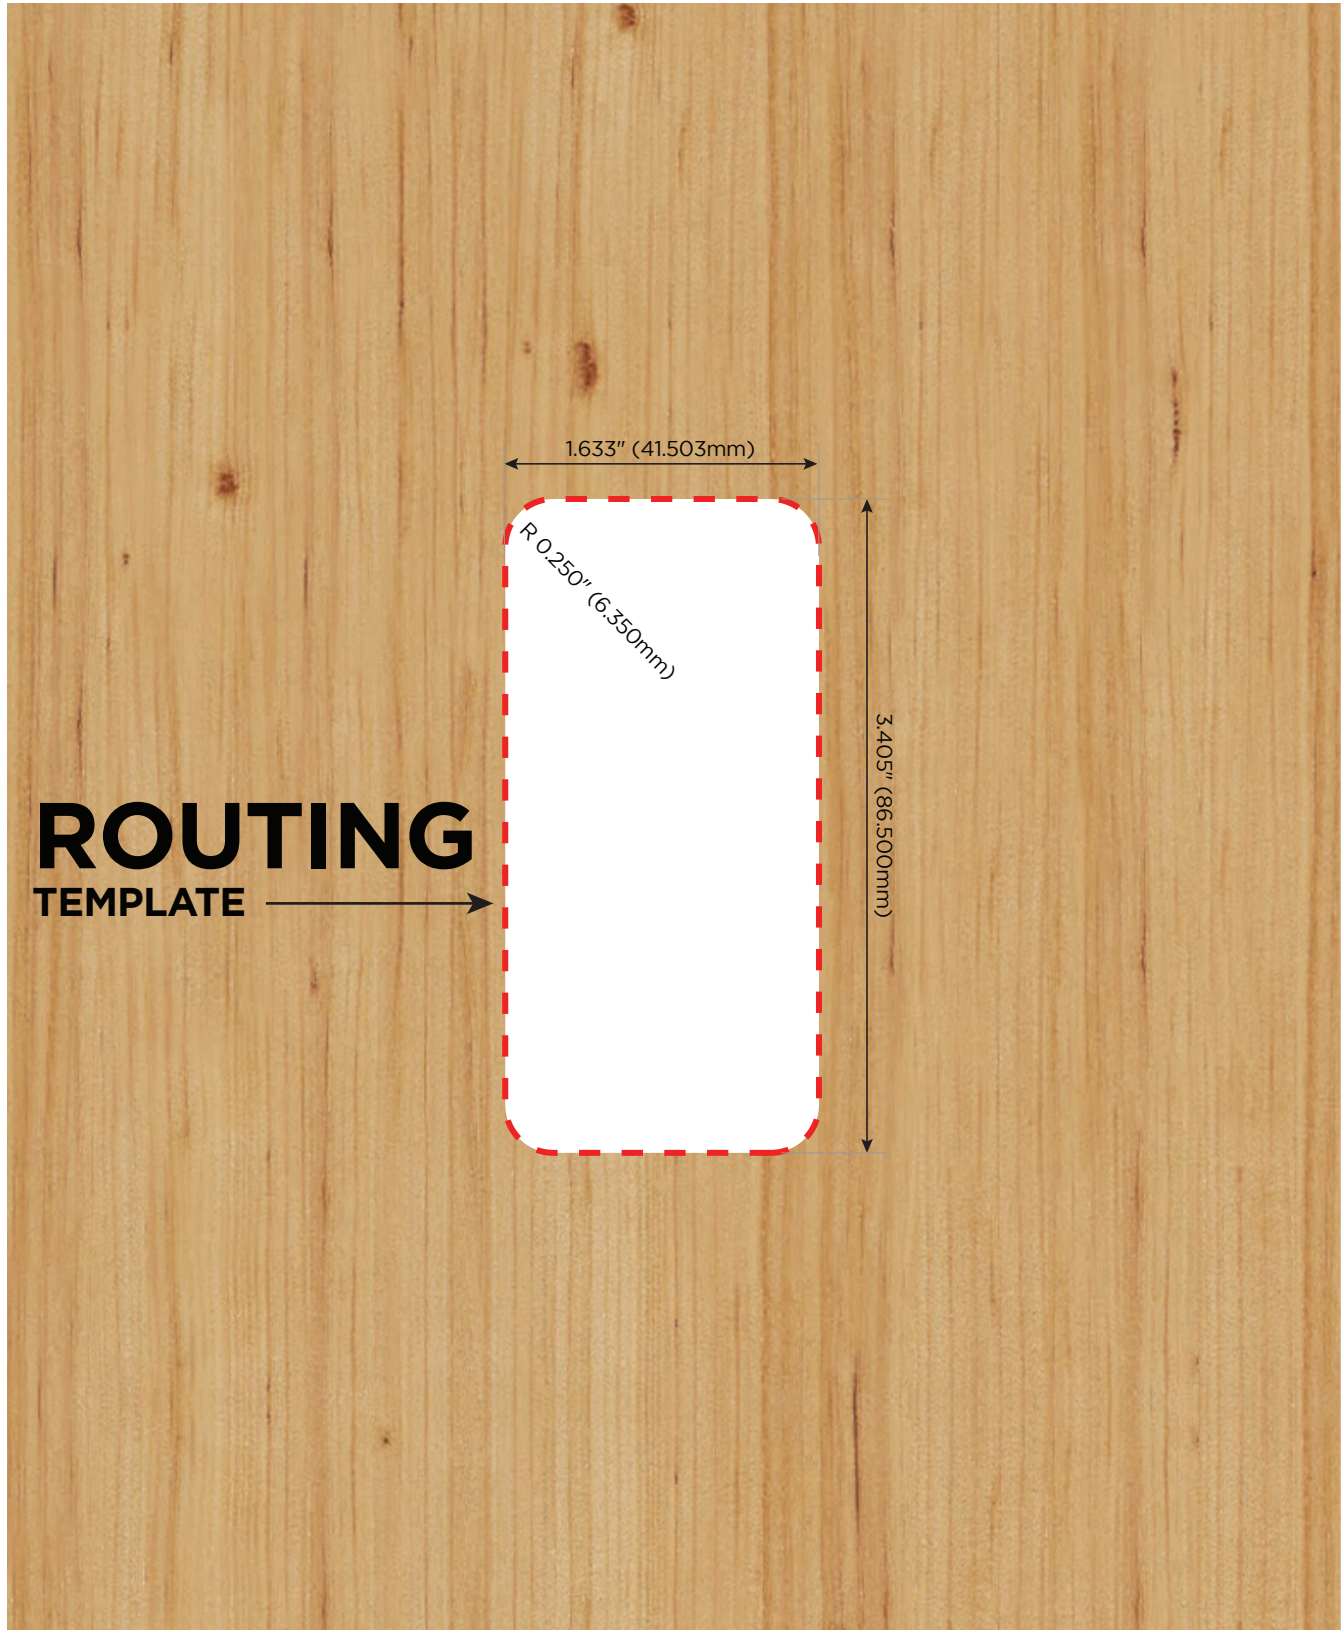



M-POWER-1T-TRIM PLATE

ABOVE SURFACE TRIM PLATE INSTALL GUIDE
FOR VERSIONS WITH SWITCHES / AC PIGTAILS

Distributed by



Mormax Company, Inc.

8 Westchester Plaza

Elmsford, NY 10523



914-699-0101



sales@mormax.com



mormax.com

