

M-POWER-1T-BEZEL

BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com



CUT HOLE IN TOP

1 Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



CUT HOLE IN BOTTOM

2 Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".



INSTALL OUTLET

3 Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.

**NOTE: Max Torque Force when tightening nuts is:
0.4 N·cm ~ 0.6 N·cm**



SECURE SCREWS

4 Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.



M-POWER-1T-BEZEL

BEZEL INSTALL GUIDE


Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

**TOP
TEMPLATE**

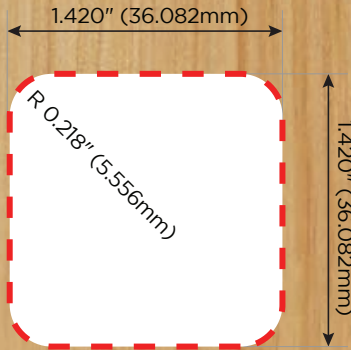



M-POWER-1T-BEZEL


BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

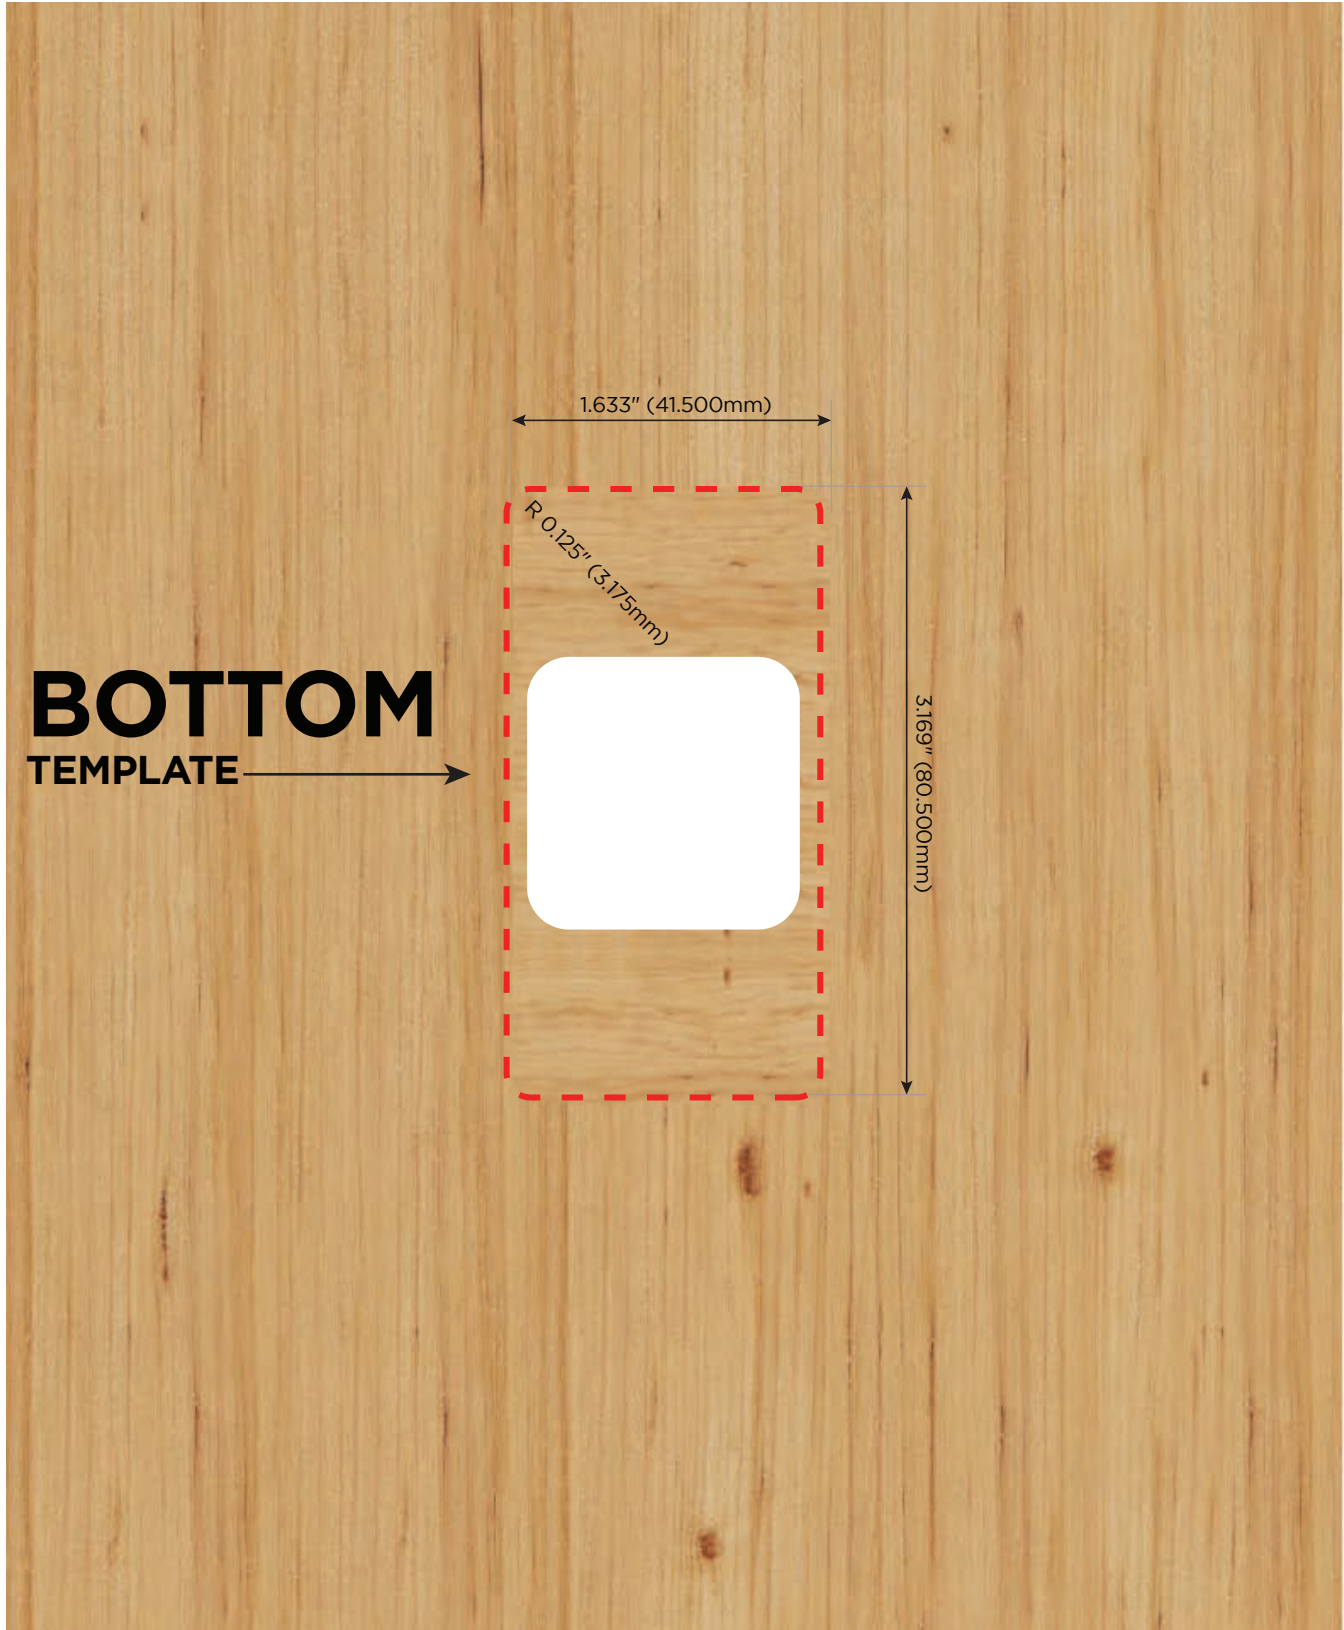



M-POWER-1T-BEZEL


BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

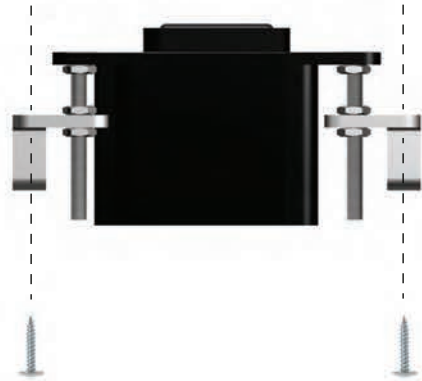

DETAIL

0.234" (5.944mm)

