



CUT HOLE IN TOP

1

Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



CUT HOLE IN BOTTOM

2

Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".



INSTALL OUTLET

3

Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.

NOTE: Max Torque Force when tightening nuts is:
0.4 N·cm ~ 0.6 N·cm



SECURE SCREWS

4

Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.

M-POWER-1T-ROUND-BEZEL

ROUND BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.

8 Westchester Plaza

Elmsford, NY 10523



914-699-0101




sales@mormax.com



mormax.com

TOP
TEMPLATE

1.789" (45.45 mm)

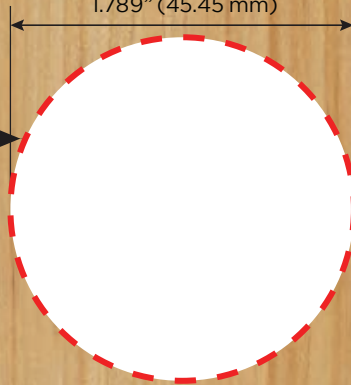

M-POWER-1T-ROUND-BEZEL

ROUND BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com



M-POWER-1T-ROUND-BEZEL

ROUND BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.

8 Westchester Plaza

Elmsford, NY 10523




914-699-0101



sales@mormax.com



mormax.com

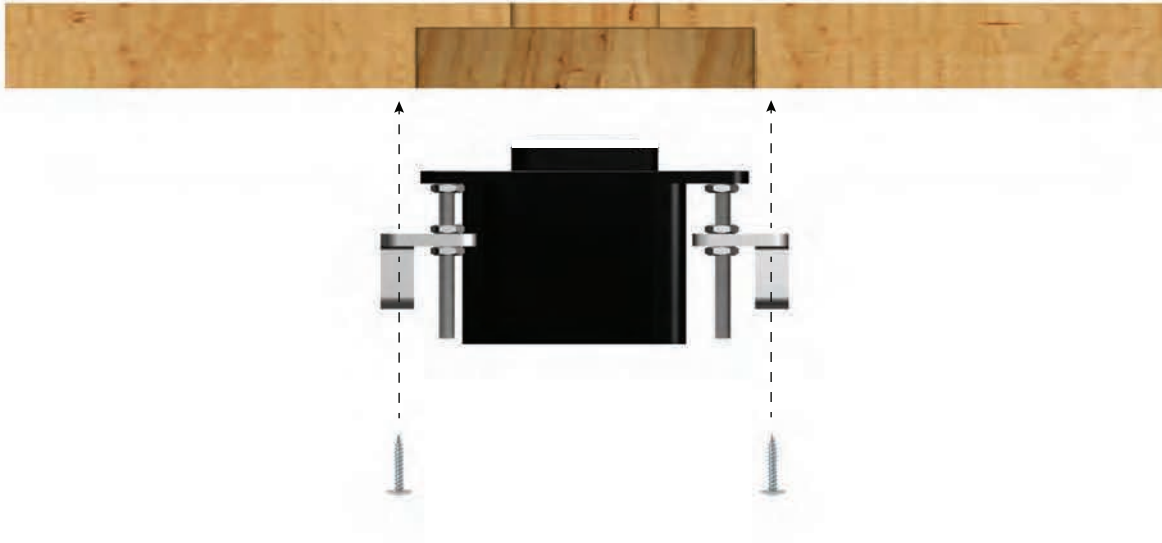

0.275" (7mm)

DETAIL