

M- POWER-3T-BEZEL

BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com



CUT HOLE IN TOP

- 1 Rout/cut top of wood/stone/etc. for outlet bezel as indicated on template labeled "TOP TEMPLATE".



CUT HOLE IN BOTTOM

- 2 Rout/cut bottom of wood/stone/etc. for outlet bezel as indicated on template labeled "BOTTOM TEMPLATE".



INSTALL OUTLET

- 3 Insert outlet from bottom, and adjust nuts above and below both of the mounting brackets so that the tops of the mounting brackets are flush with the wood/stone/etc. as shown.

**NOTE: Max Torque Force when tightening nuts is:
0.4 N-cm ~ 0.6 N-cm**



SECURE SCREWS

- 4 Insert screws into holes on the mounting bracket and screw in, locking the outlet in place.



M- POWER-3T-BEZEL


BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

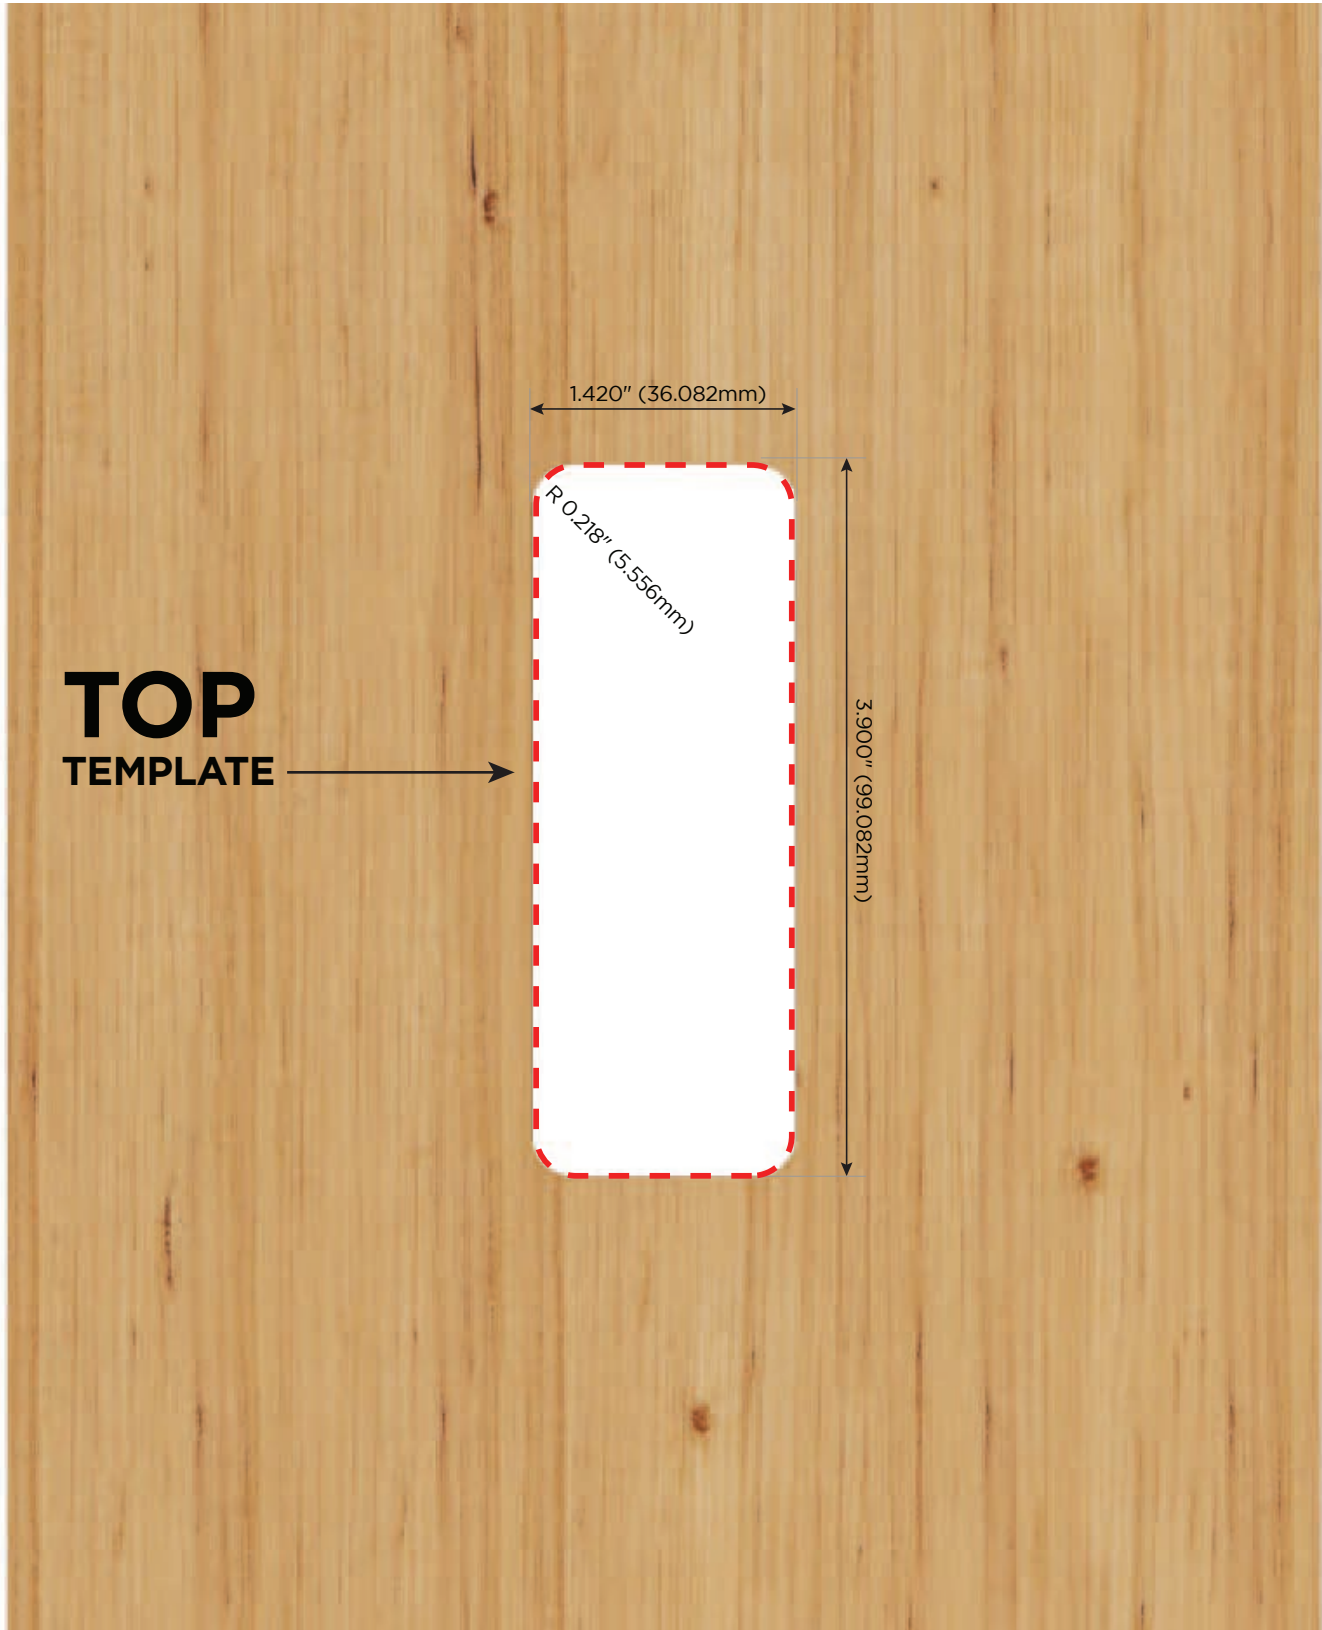

TOP
TEMPLATE →

1.420" (36.082mm)

R 0.218" (5.556mm)

3.900" (99.082mm)





M- POWER-3T-BEZEL


BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

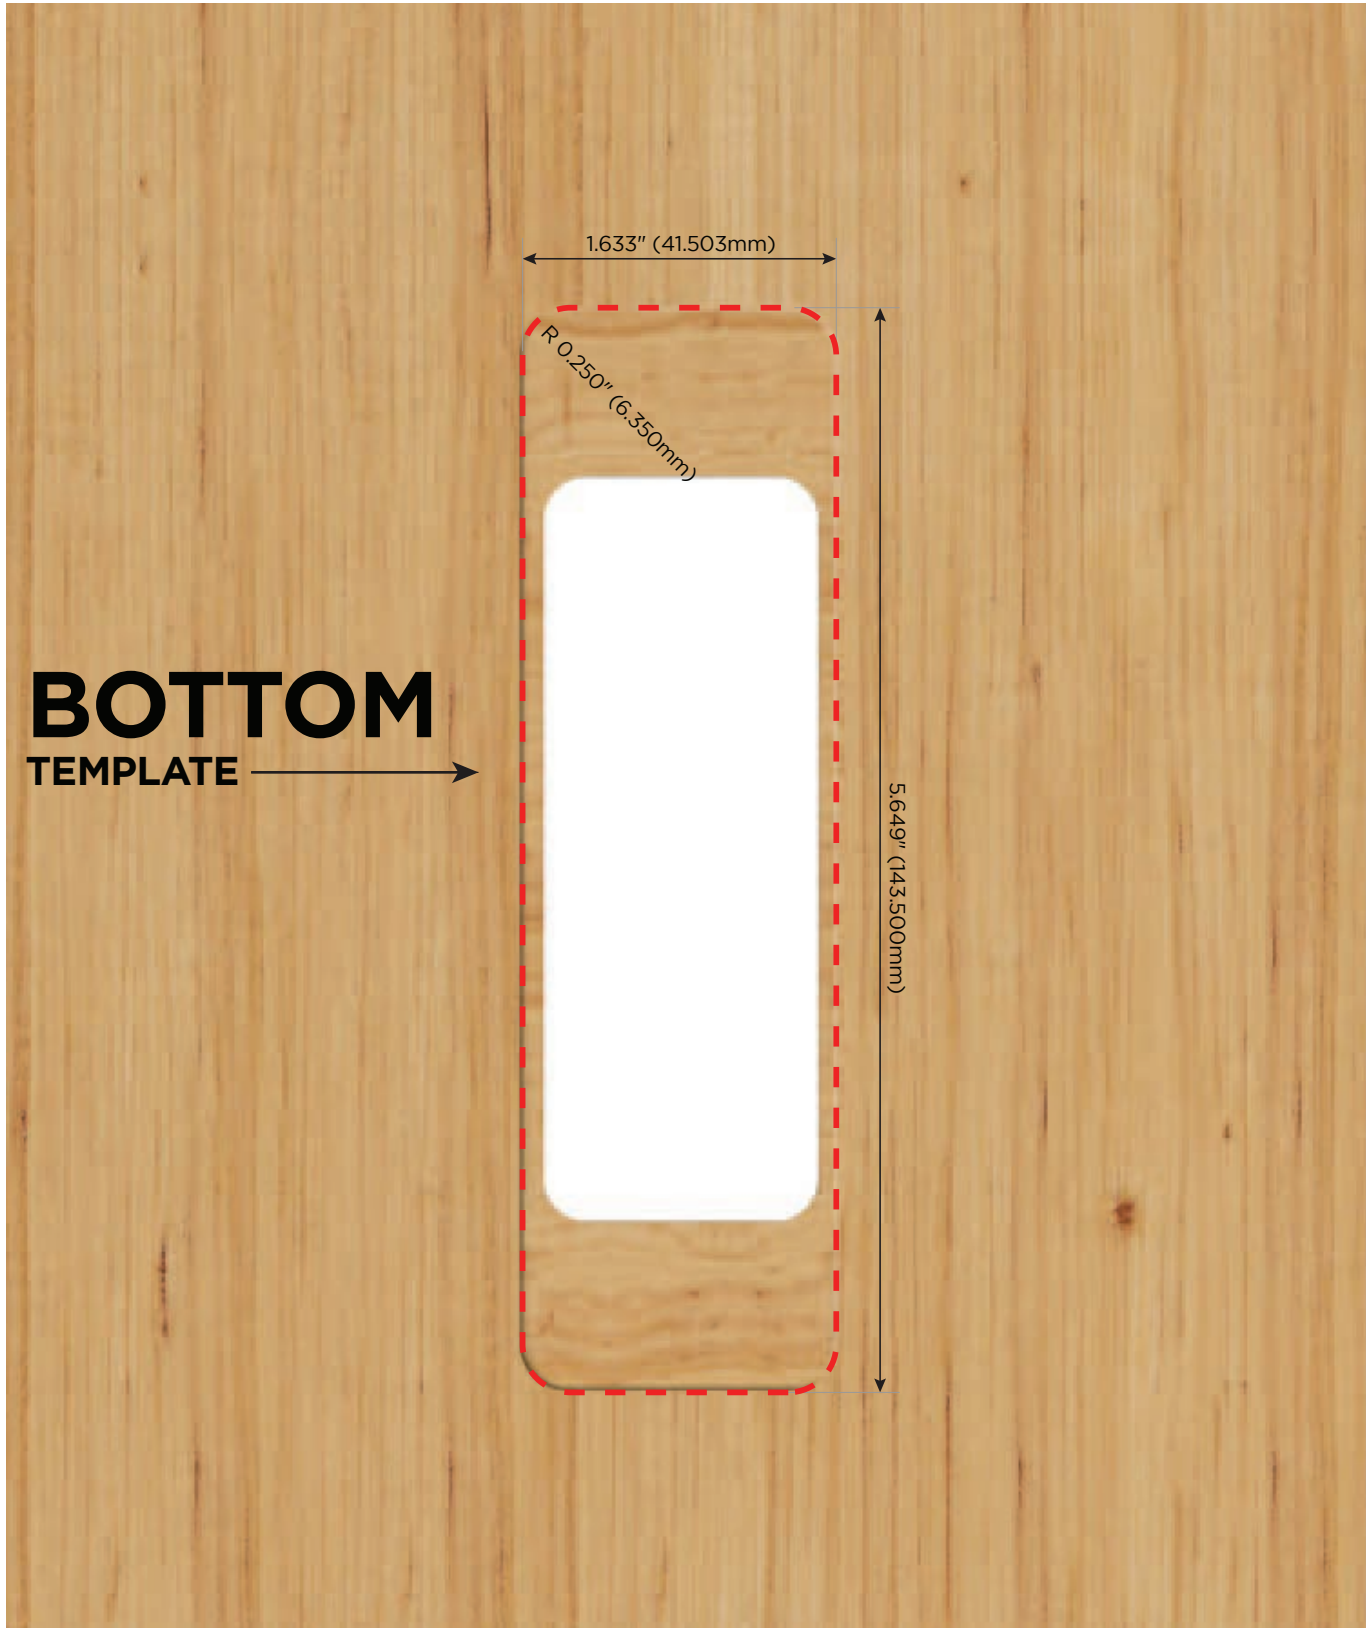

BOTTOM
TEMPLATE →

1.633" (41.503mm)

R 0.250" (6.350mm)

5.649" (143.500mm)





M- POWER-3T-BEZEL


BEZEL INSTALL GUIDE

Distributed by



Mormax Company, Inc.
8 Westchester Plaza
Elmsford, NY 10523

914-699-0101
sales@mormax.com
mormax.com

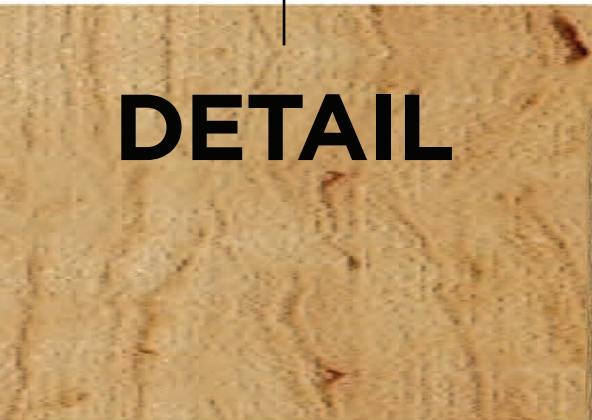

DETAIL

0.234" (5.944mm)

